


# FLEX BASE COAT APPLICATION

NEED HELP? CONTACT:

[www.Zolatone.com](http://www.Zolatone.com)

OR

1.800.765.0219

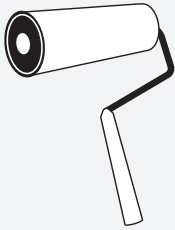

APPLY FLEX BASE COAT WITH A 1/2"  
NAP SYNTHETIC ROLLER COVER

## IMPORTANT!

DO NOT USE THE INCLUDED FOAM ROLLER COVERS FOR FLEX BASE COAT. FLEX BASE COAT MUST BE APPLIED WITH 1/2" NAP SYNTHETIC ROLLER COVERS.

**GETTING STARTED:** Flex Base Coat promotes adhesion and enables proper application of Flex Dimensions and Flex Pearl Coatings. Do not apply Flex Dimensions or Flex Pearl without first applying Flex Base Coat. Flex Base Coat will arrive tinted to match the finish coat color.

**MATERIAL PREPARATION:** After opening, stir by hand with slow rolling motion to achieve complete uniform consistency. Flex Base Coat will be tinted match the color of the Finish coat.

**SURFACE PREPARATION:** Surfaces should be prepared for an eggshell paint finish. Surfaces should be clean, dry, free of dust, grease, wax and deglossed if necessary. Smooth, even surfaces free of defects and foreign contaminates produce the best results. Before applying Flex Base Coat, surfaces should be primed with a quality untinted acrylic primer (if necessary). Allow 30-45 minutes for the Flex Base Coat to dry before applying Flex Finish Coat. NOTE: Do not use supplied foam rollers to apply Flex Base Coat.

**THINNING:** DO NOT THIN.

**APPLICATION:** BASE COAT APPLICATION: MIXING: After opening, stir by hand with gentle rolling motion to achieve complete uniform consistency. APPLICATION: Apply using a 1/2 nap synthetic roller and brush and apply one coat of Flex Base Coat. This adhesion promoting base coat improves the top coat rolling properties over smooth or previously painted surfaces.

**FLEX BASE COAT COVERAGE:** Approximately 300 sq. ft./gal depending on the surface porosity and texture of the substrate.

**THINNING:** DO NOT THIN.

**FLEX BASE COAT DRY TIME:** Approximately 30 minutes to touch; 30-45 minutes to recoat at @ 70°F and 50% relative humidity.

**NOTE:** Do not use supplied foam rollers to apply Flex Base Coat.

**CLEAN UP:** Clean equipment with soap and water. Clean spatters or spills with water.

**USE PROPER LIGHTING WHILE APPLYING FLEX. NOT INTENDED FOR:  
FLOORS, EXTERIORS OR AREAS SUBJECT TO CONTINUOUS WATER CONTACT.**

# FLEX DIMENSIONS APPLICATION

NEED HELP? CONTACT:

[www.Zolatone.com](http://www.Zolatone.com)

OR

1.800.765.0219



## IMPORTANT!

FLEX DIMENSIONS MUST BE APPLIED WITH THE FOAM ROLLER COVERS IN KIT!

**DISPOSAL:** Dispose of contents and container in accordance with all local, regional, national and international regulations.

**STORAGE:** Store locked up.

**GETTING STARTED:** Each Flex Dimensions kit includes Flex Base Coat, Flex Dimensions Coat, 9-inch foam roller cover, 4-inch foam roller cover (1 set of rollers per 5 gallons) and a color sample for reference.

**MATERIAL PREPARATION:** After opening, stir by hand with slow rolling motion to achieve complete uniform consistency. DO NOT USE MECHANICAL AGITATOR.

**SURFACE PREPARATION:** Surfaces should be prepared for an eggshell paint finish. Surfaces should be clean, dry, free of dust, grease, wax and deglossed if necessary. Smooth, even surfaces free of defects and foreign contaminates produce the best results. Before applying Flex Dimensions, surfaces should be primed with a quality untinted acrylic primer (if necessary) and coated with Flex Base Coat. Flex Base Coat promotes adhesion and enables proper application of Flex Dimensions. Follow the application instructions on the Flex Base Coat can and allow 30-45 minutes for the Flex Base Coat to dry before applying Flex Dimensions. NOTE: Do not use supplied foam rollers to apply Flex Base Coat.

**THINNING:** DO NOT THIN.

**APPLICATION:** Start by cutting-in and covering difficult areas using the included 4-inch foam roller cover. Using the supplied 9-inch foam roller cover, roll the Flex Dimensions over the surface. Load roller and evenly roll manageable sections ceiling to floor using vertical strokes with even pressure. Avoid rolling too thin. Apply each section from top to bottom ensuring the finish is laying in same direction. Approximately 2-3 hours to touch. IMPORTANT: Do Not Over Work – This can lift the product from the surface.

**COVERAGE:** You can expect coverage of 160 sq. ft. per gal. at an average thickness of 6 mils. Coverage varies depending on surface texture, porosity and film thickness.

**DRY TIME:** Approximately 2 hours to recoat @ 70° F and 50% relative humidity. Inspect the dried Finish Coat and reapply in light areas if needed.

**CLEAN UP:** Clean equipment with soap and water. Clean spatters or spills with water.

**Not Intended For: floors, exteriors or areas subject to continuous water contact.**

**zolatone**  
INTERIOR COATINGS

**MASTER COATING TECH.**  
2777 Eagandale Blvd  
Eagan, Mn 551221  
1 800 765 6699

PRODUCT HAS 6 MO. SHELF LIFE  
STORE IN A COOL, DRY PLACE  
BETWEEN 50° & 80° F  
DO NOT FREEZE!